


INSTALLATION

1. INSTALL FRONT AIRBAG SENSOR LH AND RH

- (a) Install the front airbag sensors with the 4 bolts.
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)
- (b) Connect the front airbag sensor connector.

NOTICE:

- The connector is connected after the sensor assembly has been installed.
- Make sure the sensor is installed with the specified torque.
- If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.
- The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.

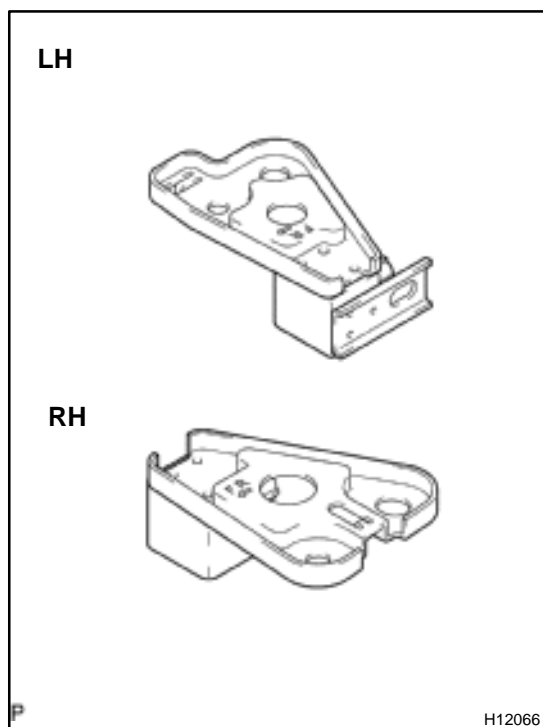

HINT:

Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

2. INSTALL TOOL BOX ASSEMBLY
3. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER