



## INSPECTION

### INSPECT STABILIZER BAR LINK BALL JOINT FOR ROTATION CONDITION

- (a) As shown in the illustration, flip the ball joint stud back and forth 5 times, before installing the nut.
- (b) Using a torque wrench, turn the nut continuously at a rate of 2 – 4 seconds per 1 turn and take the torque reading on the 5th turn.

#### Turning torque:

**0.05 – 1.0 N·m (0.5 – 10 kgf·cm, 0.4 – 8.7 in.-lbf)**