

INSTALLATION

Installation is in the reverse order of removal (See page [SA-33](#)).

HINT:

After installation, check the ABS speed sensor signal (See page [DI-163](#)) and rear wheel alignment (See page [SA-7](#)).