


REAR WHEEL HUB BOLT REPLACEMENT


SA1PB-02

1. REMOVE REAR WHEEL

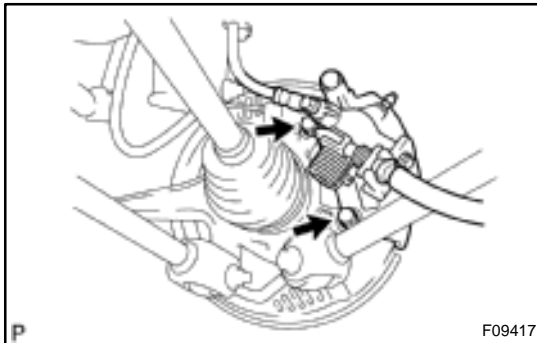

2. REMOVE BRAKE CALIPER AND DISC


- (a) Remove the 2 bolts, brake caliper and disc.
- (b) Support the brake caliper securely.

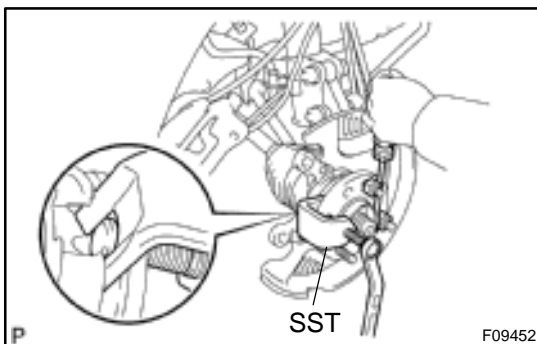

3. REMOVE HUB BOLT

Using SST, 2 nuts and a screwdriver or an equivalent, remove the hub bolt.

SST 09628-10011

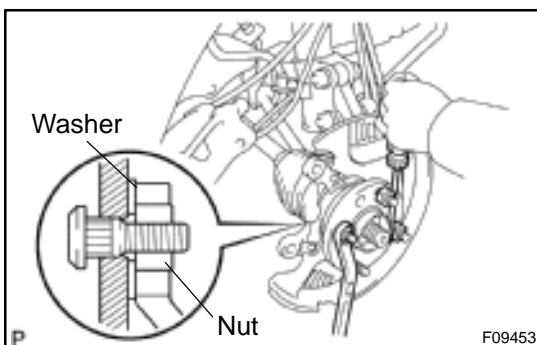

4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a screwdriver or an equivalent to hold, install the hub bolt by torquing the nut.
- (c) Remove the 3 nuts and washer.

5. INSTALL DISC AND BRAKE CALIPER

Install the disc and brake caliper with the 2 bolts.

Torque: 59 N·m (602 kgf·cm, 44 ft·lbf)

6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)