

INSTALLATION

Installation is in the reverse order of removal (See page [SA-58](#)).

HINT:

After installation, check the rear wheel alignment (See page [SA-7](#)).