


REASSEMBLY

1. COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN
2. INSERT PISTON WITH SPRING INTO CYLINDER

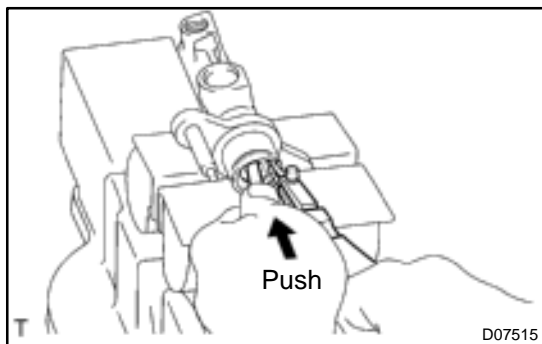

3. INSTALL PUSH ROD

- (a) Install the washer to the push rod.
- (b) Push the push rod into the piston.
- (c) Using snap ring pliers, install the snap ring.

4. INSTALL BOOT TO CYLINDER

5. TEMPORARILY INSTALL LOCK NUT AND CLEVIS

6. INSTALL RESERVOIR

- (a) Install the float and cap to the reservoir.
- (b) Install a new grommet and reservoir to the cylinder body.
- (c) Using a pin punch and a hammer, tap in the slotted spring pin.

