


SUPPLEMENTAL RESTRAINT SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

D16OW-05

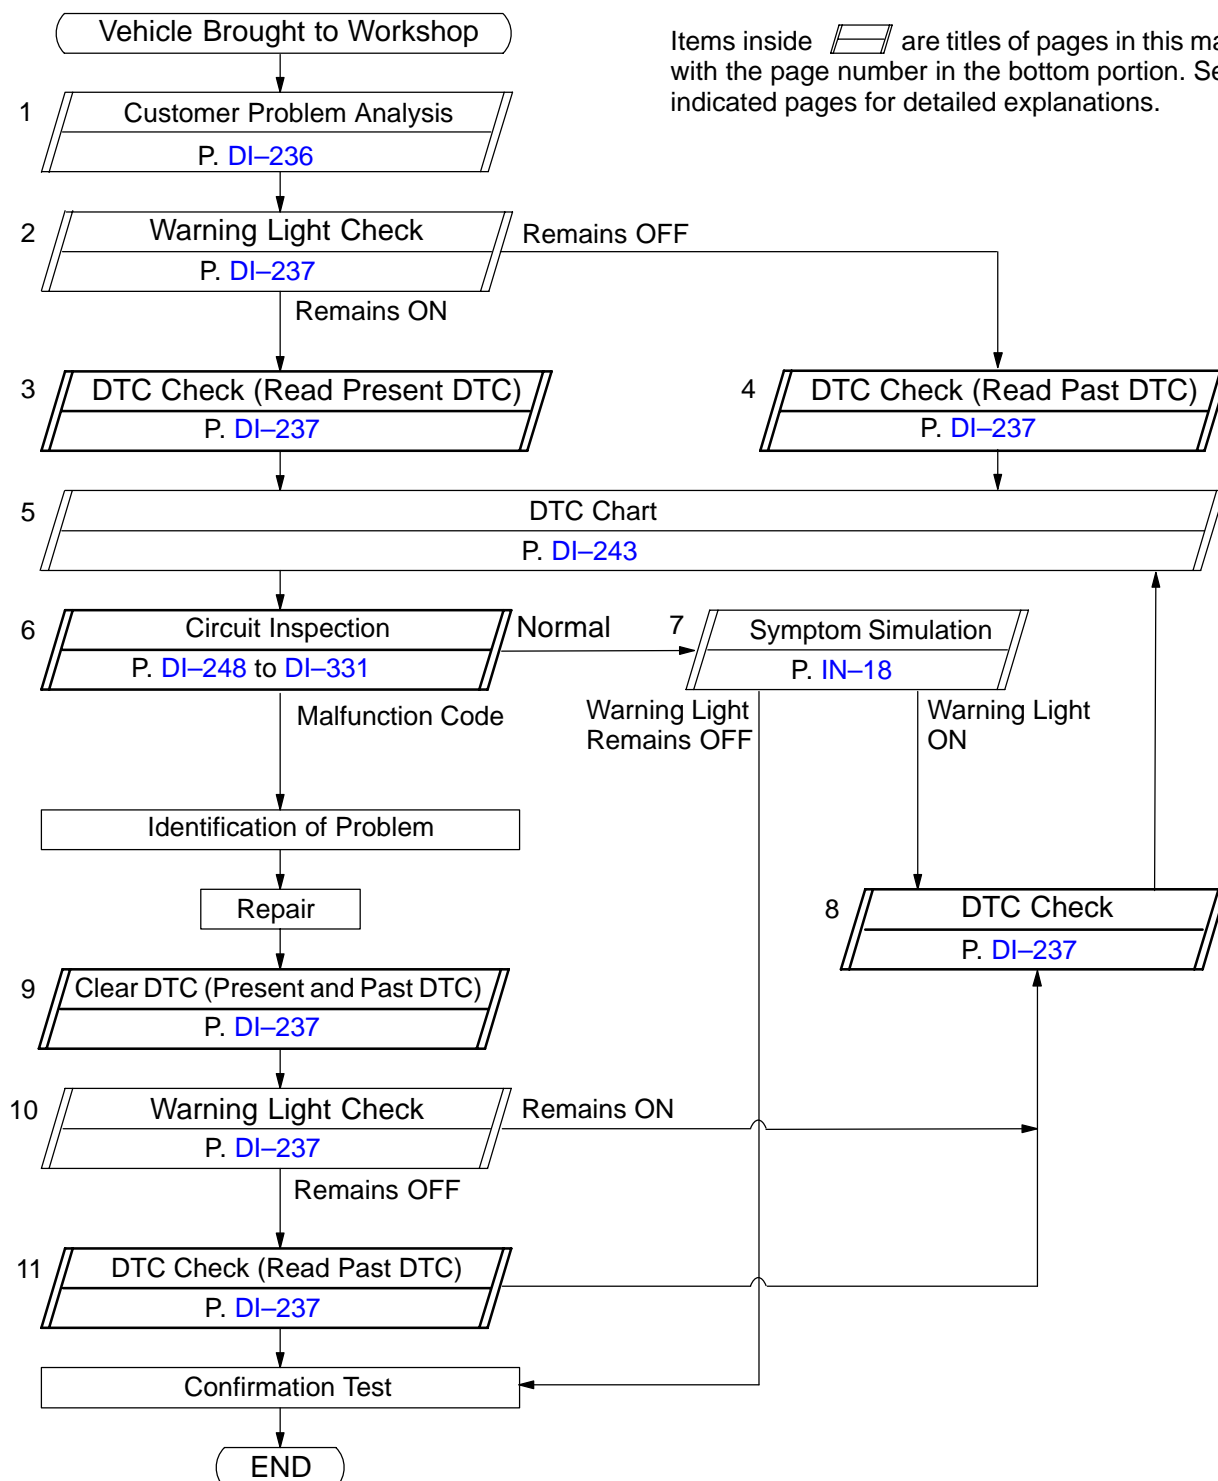

Step 3, 4, 6, 8, 9, 11 : Diagnostic steps permitting the use of the TOYOTA hand-held tester.