


## Door Lock Control Switch

### CIRCUIT DESCRIPTION

The door lock control switch is ON when the door lock knob is in the lock position and OFF when the lock knob is in the unlock position.

### WIRING DIAGRAM

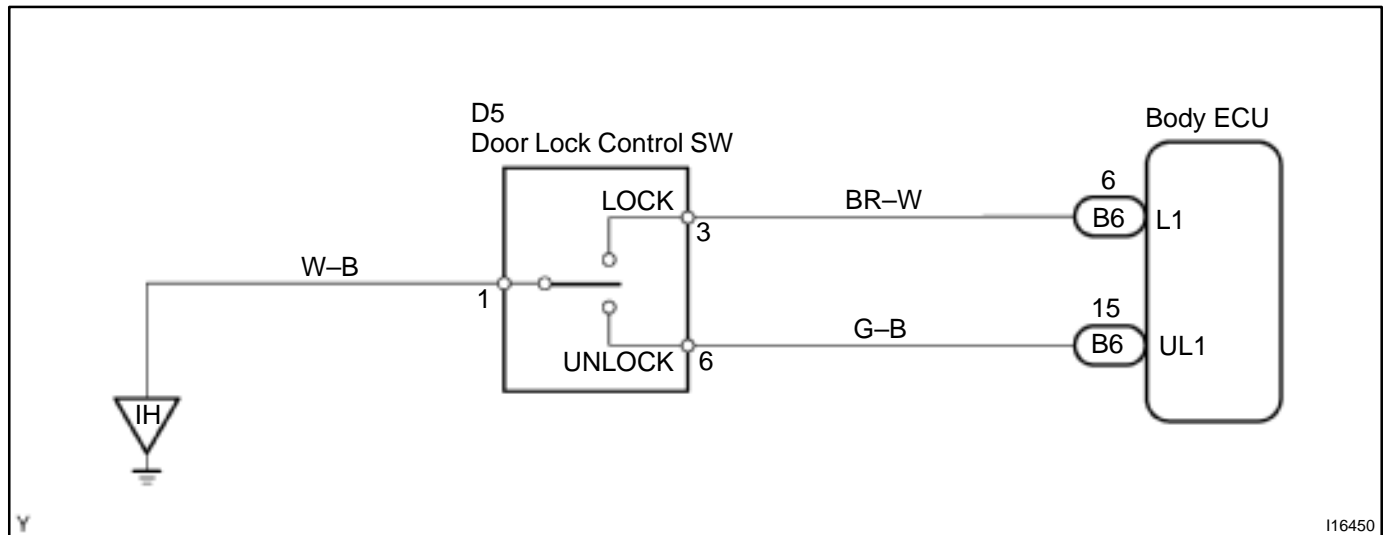

### INSPECTION PROCEDURE

- 1 Check door lock control switch (See page [BE-56](#)).

NG

Replace door lock control switch.

NG

- 2 Check harness and connector between door lock control switch and body ECU (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-359](#)).