

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface to 40 – 60°C (104 – 140°F).

NOTICE:

Do not heat the body excessively.

- (b) Remove the adhesive tape from the body.
- (c) Wipe off stains with cleaner.

2. If reusing the moulding:


CLEAN MOULDING

- (a) Using a heat light, heat the moulding to 20 – 30°C (68 – 86°F).

NOTICE:


Do not heat the moulding excessively.

- (b) Remove the adhesive tape from the moulding.
- (c) Wipe off stains with cleaner.
- (d) Apply a new adhesive tape to the moulding.

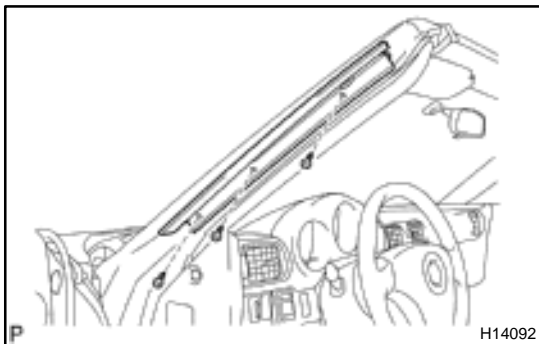

3. INSTALL ROOF DRIP SIDE MOULDING

Install the roof drip side moulding with the 3 screws.

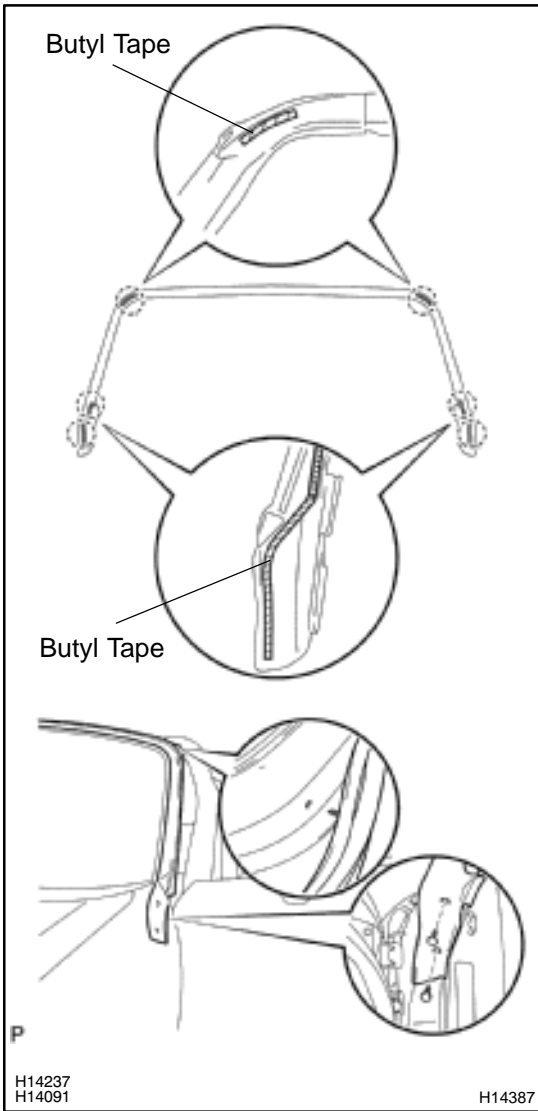

4. INSTALL FRONT CONVERTIBLE ROOF WEATHERSTRIP

Install the front convertible roof weatherstrip with the 6 clips as shown in the illustration.