

CO0YC-01

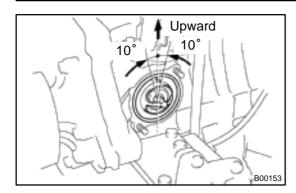

## INSTALLATION

- 1. PLACE THERMOSTAT IN CYLINDER BLOCK
- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward. HINT:

The jiggle valve may be set within 10° of either side of the prescribed position.

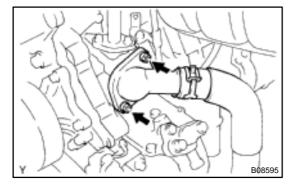

## 2. INSTALL WATER INLET

Install the water inlet with the 2 nuts.

Torque: 9 N·m (92 kgf-cm, 80 in.-lbf)

- 3. INSTALL FRONT ENGINE UNDER COVER
- 4. INSTALL GENERATOR AND DRIVE BELT (See page CH-17)
- 5. FILL WITH ENGINE COOLANT (See page CO-2)
- 6. START ENGINE AND CHECK FOR LEAKS
- 7. RECHECK ENGINE COOLANT LEVEL

2000 MR2 (RM760U)

Author: Date: 721