



INSTALLATION

1. INSTALL THROTTLE BODY

- (a) Install 2 new gaskets to the intake manifold as shown in the illustration.
- (b) Install the accelerator cable bracket to the throttle body with the 2 bolts.

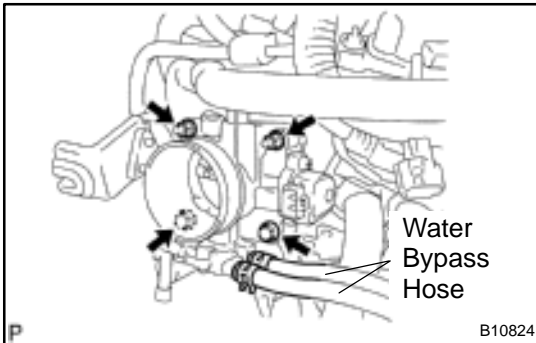

- (c) Install the throttle body with the 2 bolts and 2 nuts bolts.
Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)
- (d) Connect the 2 water bypass hoses to the throttle body.

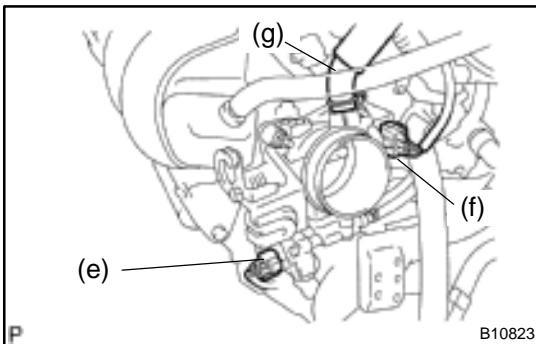

- (e) Connect the IAC valve connector.
 - (f) Connect the throttle position sensor connector.
 - (g) Connect the PCV hose to the throttle body.
2. **CONNECT ACCELERATOR CABLE**
 3. **INSTALL AIR CLEANER HOSE**
 4. **INSTALL VSV FOR EVAP**
 5. **INSTALL SUSPENSION UPPER BRACE**
 6. **FILL RADIATOR WITH ENGINE COOLANT**