


INSTALLATION

1. INSTALL COOLING UNIT

- (a) Install the cooling unit with the 4 screws and 2 nuts.
- (b) Connect the thermistor connector.
- (c) Connect the blower resistor connector.

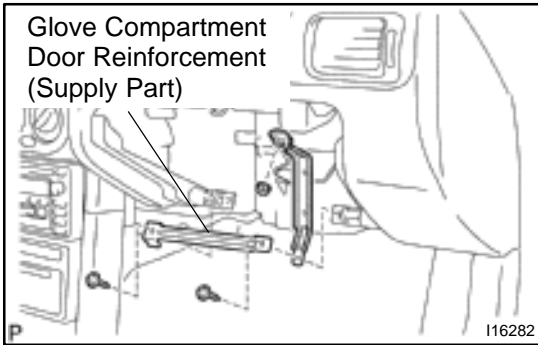


- (d) Install the glove compartment door reinforcement (supply part) and No. 1 instrument panel lower bracket with the 2 screws and nut.

HINT:


- Install the glove compartment door reinforcement with the bended side facing to the driver seat side.
- Pile up the glove compartment door reinforcement (supply part) on the No. 1 instrument panel lower bracket.

2. INSTALL GLOVE COMPARTMENT DOOR

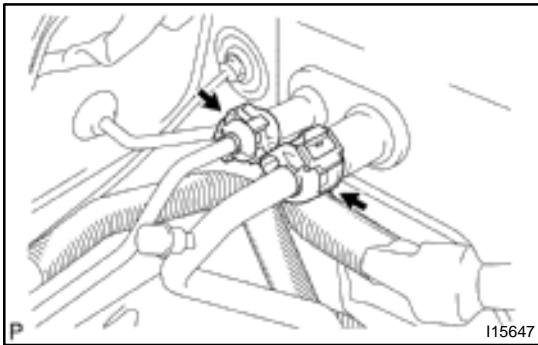

3. CONNECT LIQUID TUBE AND SUCTION TUBE

- (a) Connect the both tubes.
- (b) Install the 2 piping clamps.

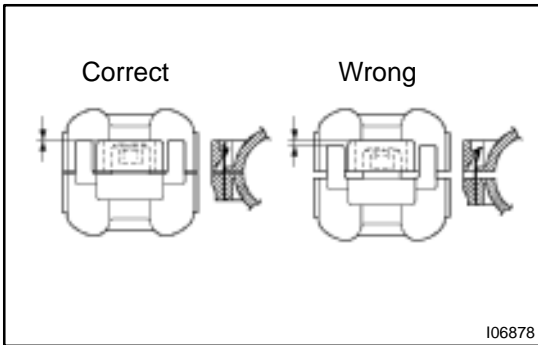

- (c) After connection, check the fitting for claw of the piping clamp.

4. CHARGE REFRIGERANT TO REFRIGERATION SYSTEM

- (a) Evacuate air from refrigeration system.
- (b) Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 30 g (17.64 ± 1.06 oz.)

5. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER