


INSTALLATION

1. INSTALL HEATER UNIT

- Install the heater unit with the 3 nuts.
- Connect the 2 connector clamps.
- Connect the 2 wire clamps with the 2 screws.

2. INSTALL REINFORCE AND INSTRUMENT PANEL (See page [BO-47](#))

3. INSTALL PIPE GROMMETS

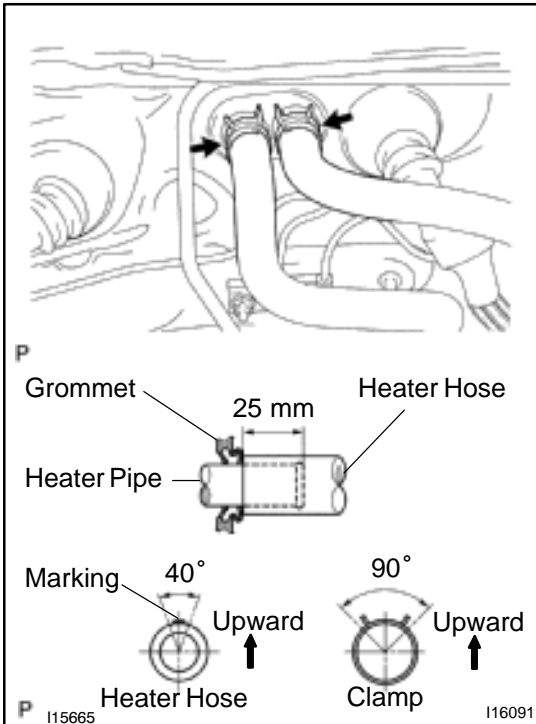

4. CONNECT WATER HOSES TO HEATER RADIATOR PIPES

- Connect the 2 heater hoses.
- Push the water hose onto the heater radiator pipe as far as the grommet.
- Install the hose clip in a position, as shown in the illustration.
- Using pliers, grip the claw of the hose clip and slide the hose clip.