

DTC	P1300	Igniter Circuit Malfunction (No. 1)
------------	--------------	--

DTC	P1305	Igniter Circuit Malfunction (No. 2)
------------	--------------	--

DTC	P1310	Igniter Circuit Malfunction (No. 3)
------------	--------------	--

DTC	P1315	Igniter Circuit Malfunction (No. 4)
------------	--------------	--

CIRCUIT DESCRIPTION


A Direct Ignition System (DIS) has been adopted. The DIS improves the ignition timing accuracy, reduces high-voltage loss, and enhances overall reliability of the ignition system by eliminating the distributor.

The DIS is a 1-cylinder ignition system which ignites one cylinder with one ignition coil. In the 1-cylinder ignition system, the spark plug is connected to the end of the secondary winding. High voltage generated in the secondary winding is applied directly to the spark plug. The spark of the spark plug passes, from the center electrode to the ground electrode.

The ECM determines ignition timing and outputs the ignition signals (IGT) for each cylinder. Based on IGT signals, the power transistors in the igniter cuts off the current to the primary coil in the ignition coil supplied to the spark plug connected to the end of the secondary coil. At the same time, the igniter also sends an ignition confirmation signal (IGF) as a fail-safe measure to the ECM.

DTC No.	DTC Detection Condition	Trouble Area
P1300 P1305 P1310 P1315	No IGF signal to ECM while engine is running	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF and IGT circuit from ignition coil with igniter • ignition coil with igniter • ECM

WIRING DIAGRAM

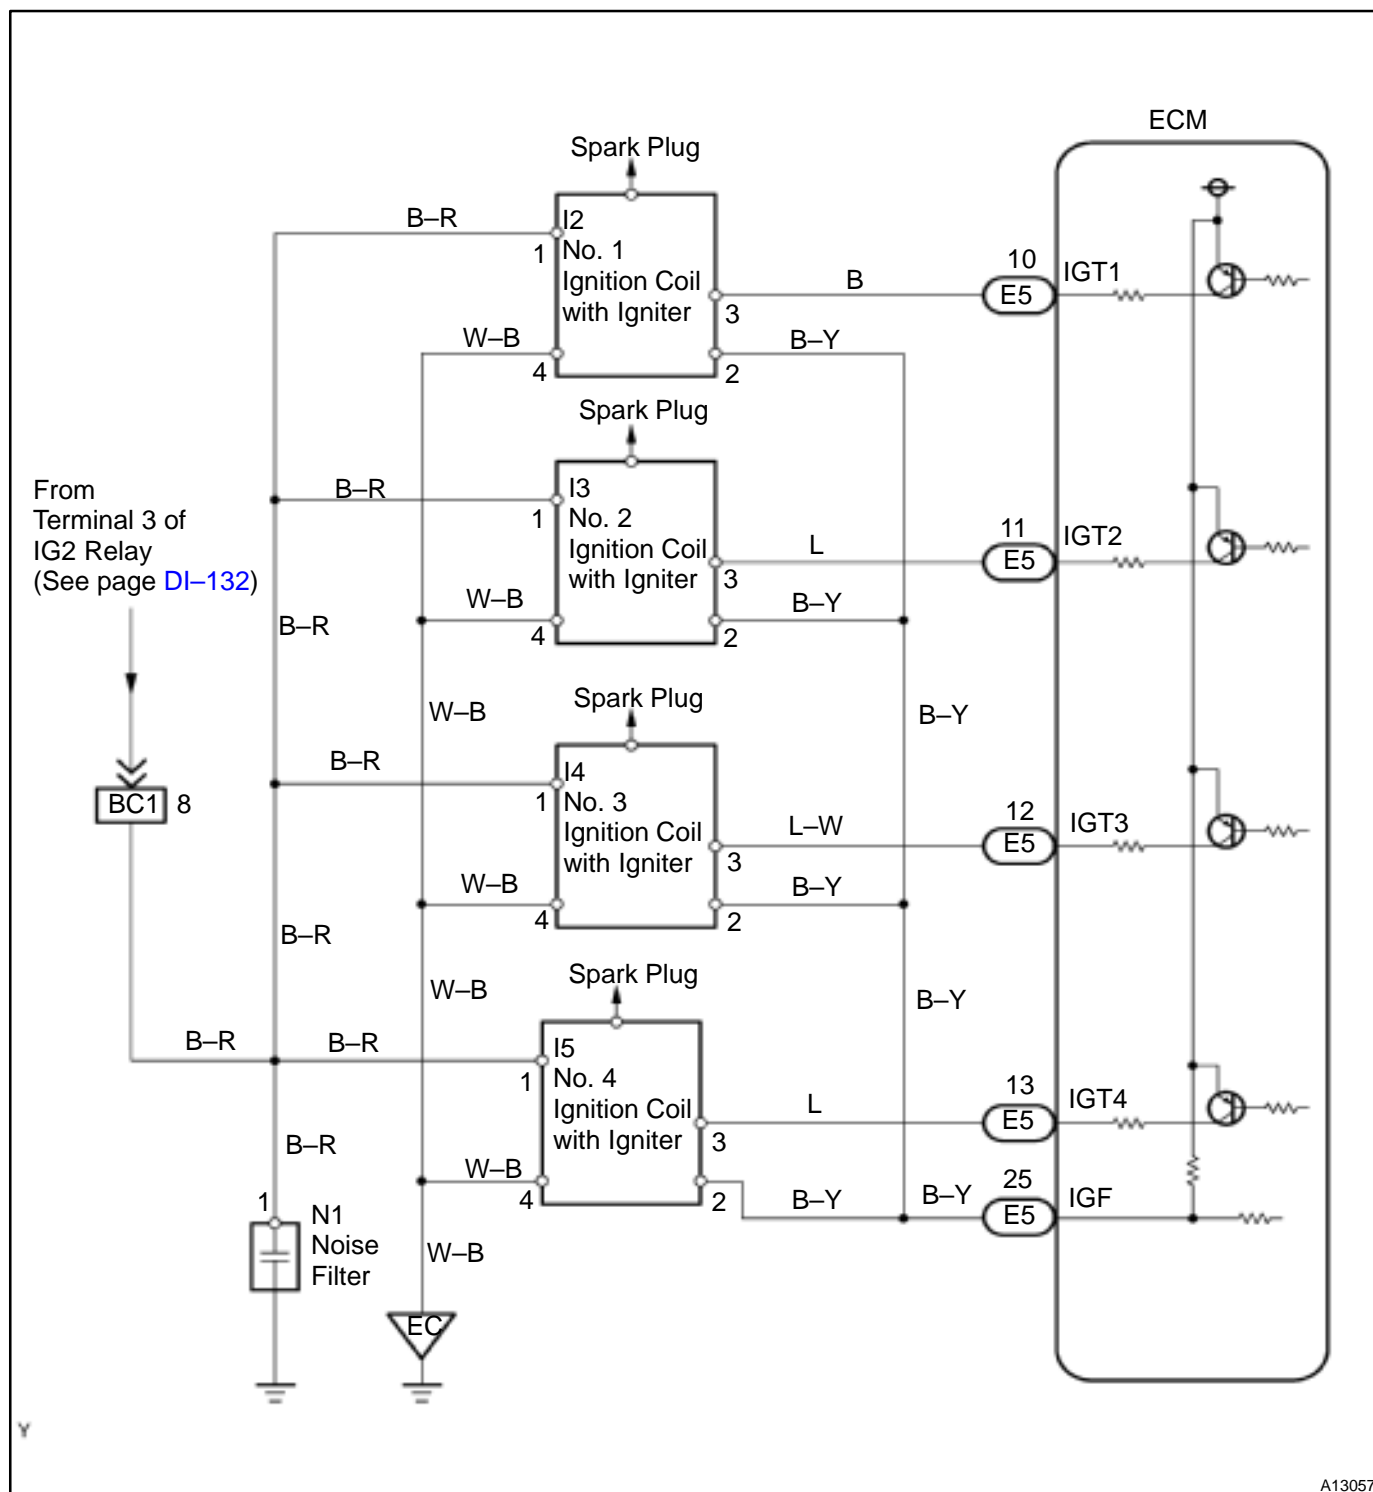

INSPECTION PROCEDURE

HINT:

- If DTC P1300 is displayed, check No. 1 ignition coil with igniter circuit.
- If DTC P1305 is displayed, check No. 2 ignition coil with igniter circuit.
- If DTC P1310 is displayed, check No. 3 ignition coil with igniter circuit.
- If DTC P1315 is displayed, check No. 4 ignition coil with igniter circuit.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 Check spark plug and spark (See page DI-63).

NG

Go to step 4.

OK


2 Check for open and short in harness and connector in IGF and IGT signal circuit between ECM and ignition coil with igniter (See page IN-28).

NG

Repair or replace harness or connector.

OK

3 Disconnect ignition coil with igniter connector and check voltage between terminals IGF of ECM connector and body ground.

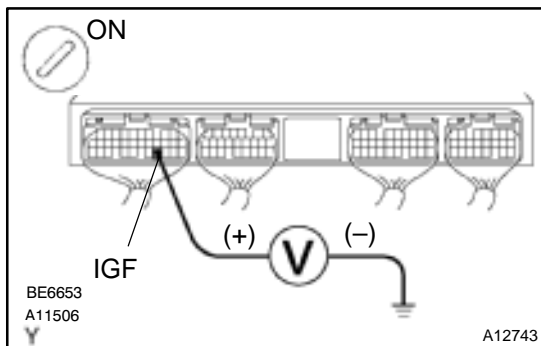

PREPARATION:

- Disconnect the ECM with connector from body panel (See page SF-62).
- Disconnect the ignition coil with igniter connector.
- Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals IGF of the ECM connector and body ground.

OK:

Voltage: 4.5 – 5.5 V

OK

Replace ignition coil with igniter.

NG

2000 MR2 (RM760U)

Check and replace ECM (See page [IN-28](#)).


- 4** Check for open and short in harness and connector in IGT signal circuit between ECM and ignition coil with igniter (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

- 5** Check voltage between terminals IGT1 – IGT4 of ECM connector and body ground.

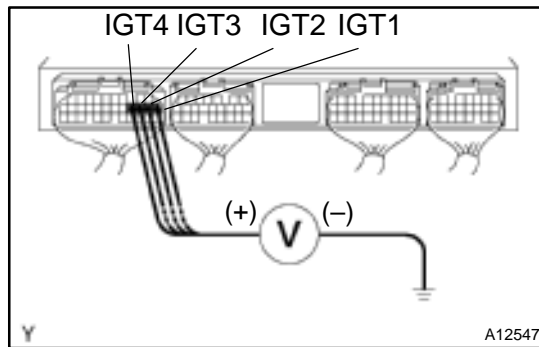

PREPARATION:


Disconnect the ECM with connector from body panel (See page [SF-62](#)).

CHECK:

Measure the voltage between terminals IGT1 – IGT4 of the ECM connector and body ground when the engine is cranked.

OK:

Voltage: More than 0.1 V and less than 4.5 V

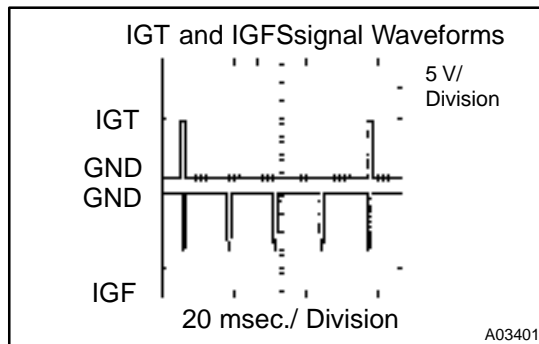

Reference: INSPECTION USING OSCILLOSCOPE

During cranking or idling, check the waveform between terminals IGT1 – IGT4 and E1, IGF and E1 of the ECM connector.

HINT:


Correct waveform appears as shown, with rectangle waves.

NG

Check and replace ECM (See page [IN-28](#)).

OK

- 6 Disconnect ignition coil with igniter connector and check voltage between terminals IGT1 – IGT4 of ECM connector and body ground.**

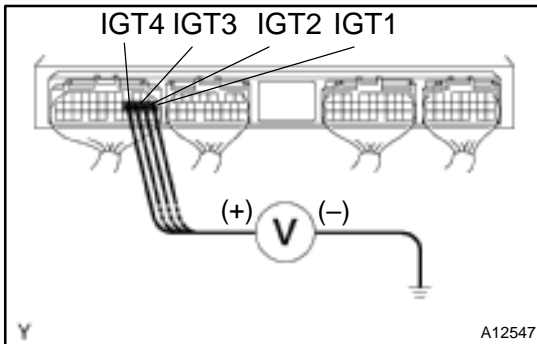**PREPARATION:**

- (a) Disconnect the ECM with connector from body panel (See page [SF-62](#)).
 (b) Disconnect the ignition coil with igniter connector.

CHECK:

Measure the voltage between terminals IGT1 – IGT4 of the ECM connector and body ground when the engine is cranked.

OK:


Voltage: More than 0.1 V and less than 4.5 V

NG

Check and replace ECM (See page [IN-28](#)).

OK

- 7 Check ignition coil with igniter power source circuit.**

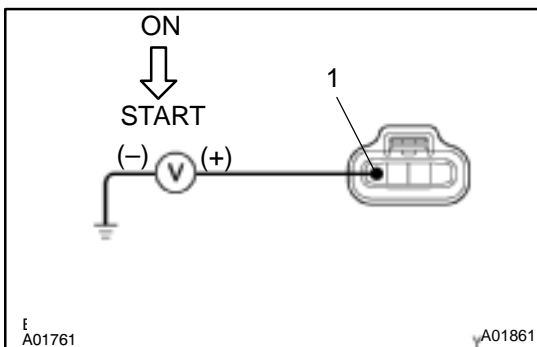**PREPARATION:**

Disconnect the ignition coil with igniter connector.

CHECK:

Measure the voltage between terminal 1 of the ignition coil with igniter connector and body ground when ignition switch is turned to ON and START position.

OK:

Voltage: 9 – 14 V

NG

Repair ignition coil with igniter power source circuit.

OK

- 8 Check for open and short in harness and connector between ignition switch and ignition coil with igniter (See page [IN-28](#)).**

NG

Repair or replace harness or connector.

OK

9	Check IG2 relay (Marking: IG2) (See page IG-7).
---	--

NG**Replace IG2 relay.****OK****Replace ignition coil with igniter.**