

DTC	B1100/31	Airbag Sensor Assembly Malfunction
------------	-----------------	---

CIRCUIT DESCRIPTION

The airbag sensor assembly consists of a airbag sensor, safing sensor, drive circuit, diagnosis circuit and ignition control, etc.

It receives signals from the airbag sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.

DTC B1100/31 is recorded when malfunction is detected in the airbag sensor assembly.


DTC No.	DTC Detection Condition	Trouble Area
B1100/31	• Airbag sensor assembly malfunction	• Airbag sensor assembly

INSPECTION PROCEDURE


HINT:

When a malfunction code other than code B1100/31 is displayed at the same time, first eliminate the malfunction indicated by the malfunction code other than code B1100/31.

1	Prepare for inspection (See step 1 on page DI-323).
----------	--



2	Check voltage between terminals IG1 and IG2 of airbag sensor assembly connector.
----------	---

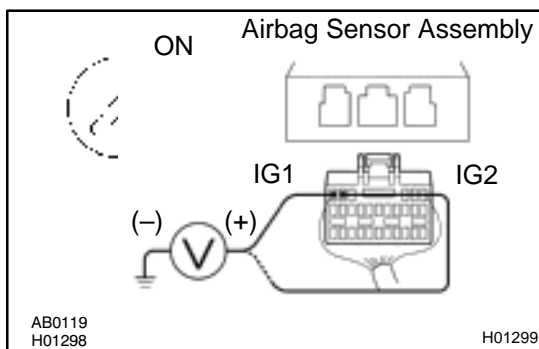

CHECK:

- Turn the ignition switch ON.
- Measure the voltage between body ground and each of terminals IG1 and IG2 of the airbag sensor assembly connector.

OK:


Voltage: 10 – 14 V

NG

Check that an abnormality occurs on battery and charging system.

OK

3 Is DTC B1100/31 output again?

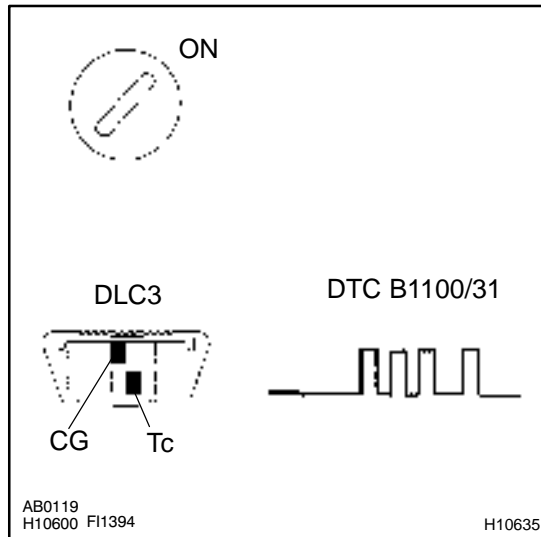**PREPARATION:**

Clear the DTC (See step 5 on page [DI-237](#)).

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch ON, and wait at least for 20 seconds.
- Repeat operation in step (a) and (b) at least 5 times.
- Check the DTC (See page [DI-237](#)).

HINT:

Codes other than code B1100/31 may be output at this time, but they are not relevant to this check.

NO

Using simulation method, reproduce malfunction symptoms (See page [IN-18](#)).

YES

Replace airbag sensor assembly.